


# Rubber Installation Guide

## Door Rubber on 1947-62 sedans and 1953-61 C-body coupe & Hawk -

Surface (A) is glued to body with opening at (B) pointing away from the door.

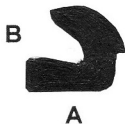


## Sill Rubber on 1947-66 all models (except Avanti) including Champ P-Up -

Surface (A) and (B) are glued to body and (C) points away from body & slightly upward.



## Boot Rubber on 1936-55 sedans and 1953-64 coupe & Hawk -

Surface (A) glues into the body channel with opening at (B) pointing away from the car.



## Boot Rubber on all 1956-66 sedans (except Avanti and Hawk) -

Surface (A) is glued to underside of boot lid with opening at (B) pointing inward.

